

TS-5XXX Console Spare Parts



PART NUMBER	DESCRIPTION
TSSP-CM	Control Module
TSSP-PS	Power Supply Module
TSSP-IFB5	TS-5 Interface Board
TSSP-IFB5X	TS-550/5000 Interface Board
TSSP-T5MB	TS-5 Motherboard
TSSP-T550MB	TS-550 Motherboard
TSSP-T5000MB	TS-5000 Motherboard
TSSP-LCD	LCD Display
TSSP-IPPTR	Impact Printer Assembly
TSSP-TRMBLK	Package of 10 Terminal Blocks

TS-LS500 Spare Parts



PART NUMBER	DESCRIPTION
TS-LSU500	Intrinsically Safe 4-20 ma Pressure Transducer
600-0080	Transducer Quick Disconnect Cable
TS-ALCAL	3GPH Calibration Kit
TS-ALNIP	Needle/Valve Kit

TS-LLD Spare Parts



PART NUMBER	DESCRIPTION
TS-CU	Control Unit
TS-LSU	Leak Sensor Unit
TS-FPU	Face Plate Unit
TS-FC	Line Filter Capacitor
020-1503	Hardware Kit
430-0010	1/2 AMP Fuse
010-0072	Control Unit Terminal Interface Board

TS-1001 Console Spare Parts



PART NUMBER	DESCRIPTION
TSSP-MSB1	Main System PC Board 110 VAC
TSSP-SMSB4	Surface Mount System PC Board 110 VAC (Serial Numbers 100,000 and higher)
TSSP-DSP1	Keypad/Display PC Board
TSSP-PSTB1	Probe Sensor Terminal Board
TSSP-PSTB1-SM	Surface Mount Probe/Sensor Term Board (Serial Numbers 100,000 and higher)
TSSP-ENCLK	Enclosure Lock/Key
TSSP-SVKT1-SM	TS-1001 Service Kit for Surface Mount Boards*
TSSP-PTR	Printer Assembly
TSSP-PTRC1	Printer Cable
TSSP-DSPKC1	Display/Keypad Cable
TSSP-SPFUUSE	Spare Fuse Kit
TSSP-BAT	3V Litium Battery
VSSP-MSB1	Main System PC Board 220 VAC
VSSP-SMSB4	Surface Mount System PC Board 220 VAC (Serial Numbers 100,000 and higher)

*TSSP-SVKT1-SM includes one (1) of the following: TSSP-SMSB4, TSSP-DSP1, TSSP-PSTB1-SM, TSSP-PTR, TSSP-PTRC1, TSSP-DSPKC1, TSSP-SPFUUSE, TSSP-ENCLK and TSSP-BAT

TS-2001 Console Spare Parts



PART NUMBER	DESCRIPTION
TSSP-MSB2	Main System PC Board 110 VAC
TSSP-SMSB8	Surface Mount System PC Board 110 VAC (Serial Numbers 100,000 and higher)
TSSP-DSP2	Keypad/Display PC Board
TSSP-PSTB2	Probe/Sensor Terminal Board
TSSP-PSTB2-SM	Surface Mount Probe/Sensor Terminal Board (Serial Numbers 100,000 and higher)
TSSP-PTR	Printer Assembly
TSSP-PTRC2	Printer Cable
TSSP-DSPKC2	Display/Keypad Cable
TSSP-SPFUUSE	Spare Fuse Kit
TSSP-ENCLK	Enclosure Lock/Key
TSSP-BAT	3V Litium Battery
TSSP-SVKT2-SM	TS-2001 Service Kit for Surface Mount Boards*
VSSP-MSB4	Main System PC Board 220 VAC
VSSP-SMSB4	Surface Mount System PC Board 220 VAC (Serial Numbers 100,000 and higher)

*TSSP-SVKT2-SM includes one (1) of the following: TSSP-SMSB8, TSSP-DSP1, TSSP-PSTB2-SM, TSSP-PTR, TSSP-PTRC1, TSSP-DSPKC1, TSSP-SPFUUSE, TSSP-ENCLK and TSSP-BAT

TS-LS300 Spare Parts



PART NUMBER	DESCRIPTION
TSSP-ALDB2	2 Line Display Board
TSSP-ALDB4	4 Line Display Board
TSSP-ALPTRC	Ribbon Cable (Display Board to Main Board)
TSSP-ALMB2	2 Line Intrinsically Safe Main Board 110 VAC
TSSP-ALMB2E	2 Line Explosion Proof Main Board 110 VAC
TSSP-ALMB4	4 Line Intrinsically Safe Main Board 110 VAC
TSSP-ALMB4E	4 Line Explosin Proof Main Board 110 VAC
TSSP-ALTPI	TPI (Turbine Pump Interface) Board
TS-LSU300	Intrinsically Safe Pressure Transducer
TS-LSU300E	Explosion Proof Pressure Transducer
600-0080	Transducer Quick Disconnect Cable
TS-ALCAL	3GPH Calibration Kit
TS-ALNIP	Needle/Valve Kit
TS-ALFUSE	AutoLearn™ Fuse Kit
VSSP-ALMB2	2 Line I/S Main Board 220 VAC
VSSP-ALMB4	4 Line I/S Main Board 220 VAC

TS-504/750 Console Spare Parts



PART NUMBER	DESCRIPTION
TSSP-MSB4	Main System PC Board 110 VAC
TSSP-SMSB4	Surface Mount System PC Board 110 VAC (Serial Numbers 100,000 and higher)
TSSP-DSP1	Keypad/Display PC Board
TSSP-PSTB4	Probe/Sensor Terminal Board
TSSP-PSTB4-SM	Surface Mount Probe/Sensor Terminal Board (Serial 100,000 and higher)
TSSP-PTR	Printer Assembly
TSSP-PTRC1	Printer Cable
TSSP-DSPKC1	Display/Keypad Cable
TSSP-SPFUSE	Spare Fuse Kit
TSSP-ENCLK	Enclosure Lock/Key
TSSP-BAT	3V Lithium Battery
TSSP-SVKT4-SM	TS-504/750 Service Kit for Surface Mount Boards*
VSSP-MSB4	Main System PC Board 220 VAC
VSSP-SMSB4	Surface Mount System PC Board 220 VAC (Serial Numbers 100,000 and higher)

*TSSP-SVKT4-SM includes one (1) of the following: TSSP-SMSB4, TSSP-DSP1, TSSP-PSTB4-SM, TSSP-PTR, TSSP-PTRC1, TSSP-DSPKC1, TSSP-SPFUSE, TSSP-ENCLK and TSSP-BAT

TS-508 Console Spare Parts



PART NUMBER	DESCRIPTION
TSSP-MSB8	Main System PC Board 110 VAC
TSSP-SMSB8	Surface Mount System PC Board 110 VAC (Serial Numbers 100,000 and higher)
TSSP-DSP1	Keypad/Display PC Board
TSSP-PSTB8	Probe/Sensor Terminal Board
TSSP-PSTB8-SM	Surface Mount Probe/Sensor Terminal Board (Serial Numbers 100,000 and higher)
TSSP-PTR	Printer Assembly
TSSP-PTRC1	Printer Cable
TSSP-DSPKC1	Display/Keypad Cable
TSSP-SPFUSE	Spare Fuse Kit
TSSP-ENCLK	Enclosure Lock/Key
TSSP-BAT	3V Lithium Battery
TSSP-SVKT8-SM	TS-508 Service Kit for Surface Mount Boards*
VSSP-MSB8	Main System PC Board 220 VAC
VSSP-SMSB8	Surface Mount System Board 220 VAC (Serial Numbers 100,000 and higher)

*TSSP-SVKT8-SM includes one (1) of the following: TSSP-SMSB8, TSSP-DSP1, TSSP-PSTB8-SM, TSSP-PTR, TSSP-PTRC1, TSSP-DSPKC1, TSSP-SPFUSE, TSSP-ENCLK and TSSP-BAT

TS-ST5 Sump Test Kit Spare Parts



PART NUMBER	DESCRIPTION
ST5-PRB-12	12" Leak Test Probe
TS-PRB-1	12" Leak Test Probe Kit*
TSP-SSP	Stainless Steel Probe Float
600-0200	Probe Cable 50 ft.
TS-TP2	One box (5 rolls) of thermal printer paper
282-0027	Chain, including split ring
282-0058	Split ring
ST5-CASE	ST5 Probe Case
ST5-REPAIR	ST5 System Repair

*Probe Kit includes probe, float, chain and cable

Note:

- For parts for the TS-ST5 unit itself, reference the TS-1001 parts list.