


**Tank Sentinel (Except TS-2001), AutoStik Jr, BulkStik, AutoStik II (1-4
 Ch) Display & Keypad Assembly (P/N 010-0087):**

Diagram: 1

Removal Steps (with all Tank Gauge power **OFF**):

- 1.) Remove the 20 conductor Cable by pulling it straight out → of its connector
- 2.) Remove the 7 Phillips head screws (star washers attached)
- 3.) Remove the green **GROUND** wire lug and pull the display board off the door

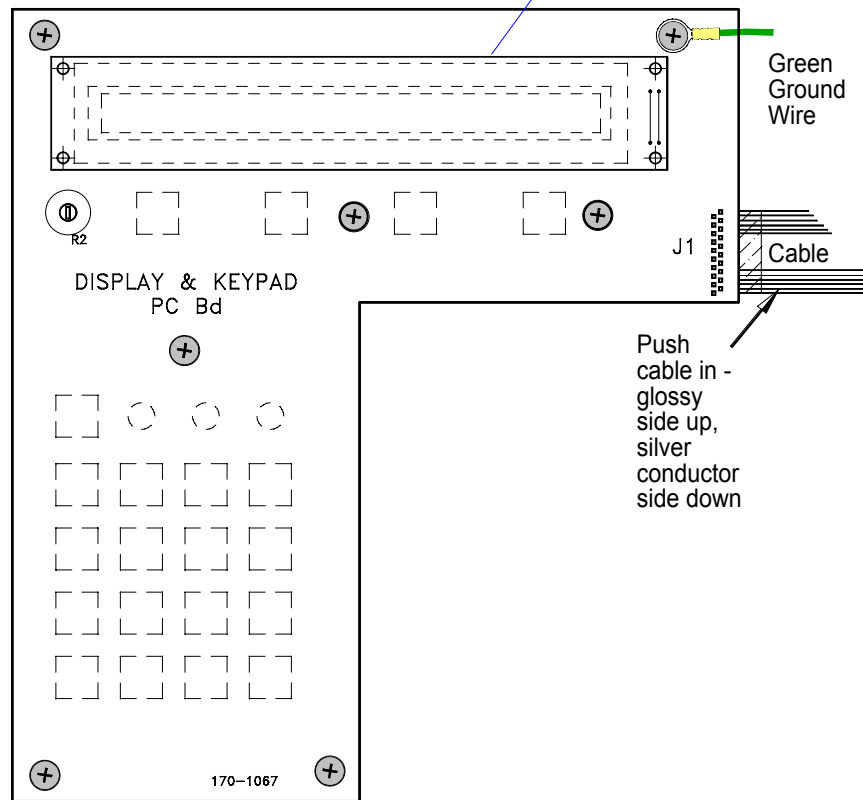

Installation Steps (with all Tank Gauge power **OFF**):

- 1.) Line up the new PC Board making sure all 3 indicator lights protrude through the circular holes in the door
- 2.) Hold the PC Board in place while reinstalling the hold down screws with star washers... don't forget to reinstall the green ground wire
- 3.) Reinstall the 20-conductor cable back into the mating connector under the **DISPLAY PC Bd** (gloss side up silver conductor side down)... Do this by grasping the flat ribbon cable near the end and pushing it straight into its connector.

