

Changing the TS-1000 Report Printer

Parts Required:

Report Printer (TSSP-PR1)


Tools Required:

Phillips-head screwdrivers
(assorted sizes)

Printer – Removal Steps:



1. **DANGER** disconnect / turn off all electrical power going to the console at the J4 terminal strip
 - Line and Relay Output power. See the Tank Gauge Installation Manual (Console & Safety Sections).
2. Push locking tabs out and unplug the printer cable at the printer.
3. Remove the two small phillips-head screws from the metal bracket.

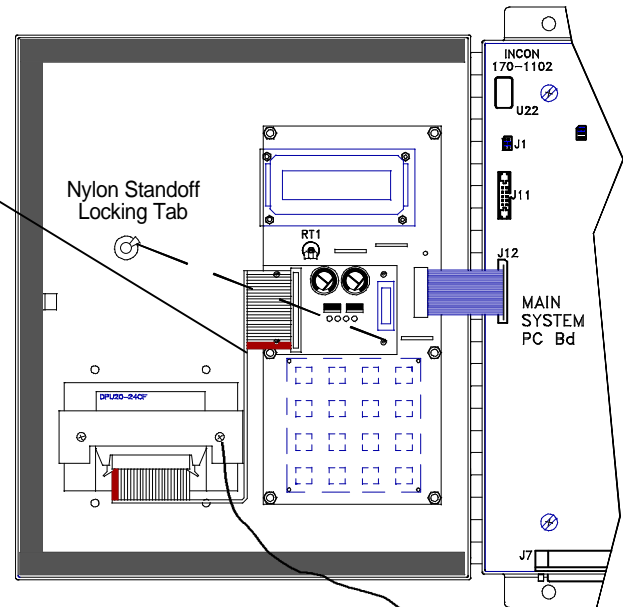

Printer – Installation:

1. Install the new printer into the console, hold it in and reinstall the phillips-head screws.
2. Install the printer cable into the printer by pushing the connector in evenly at both sides. Make sure the red stripe of the cable is facing left.
3. Close and lock the console door and turn the power back on.
4. Pull a length of paper out of the printer paper slot in the printer faceplate / bezel.
5. Reinstall the bezel by pressing in on the side-tabs while pushing in.

Need Help:

Contact **INCON** Technical Service Department at 1-800-984-6266 for help.

