

Changing the Key Lock (all models)

Parts Required:

1. Enclosure Lock and Key kit (TSSP-ENCLK)
2. Or 282-0056 for TS-1000 & TS-2000 Consoles – replacement lock and key set

Tools Required:

1. Adjustable wrench and vise grips
2. Phillips head screwdrivers (assorted sizes)


Old Key-lock assembly – Removal Steps:



1. **DANGER** disconnect electrical power as described in the TS-1000 Installation Manual (Console & Safety Sections).
2. Remove the hold-down fastener and remove the old key lock assembly. You may have to remove a safety shield to gain access to the key-lock assembly.
3. Remove the straight cam on the new key lock assembly. —

New Key-lock assembly – Installation:

1. Install the new key-lock with chrome washer into console.
2. Install the fastener inside of the console until the assembly is very snug.
3. Install the bent cam provided with this assembly (with the bent portion facing down — as shown the diagram at right). Note that the TS-2000 requires an L-shaped cam installed on the key lock. The older TS-1000 and TS-2000 also have different shaped keys.
4. Reinstall any safety-shields that were removed.
5. Close and lock the console door and turn power back on.

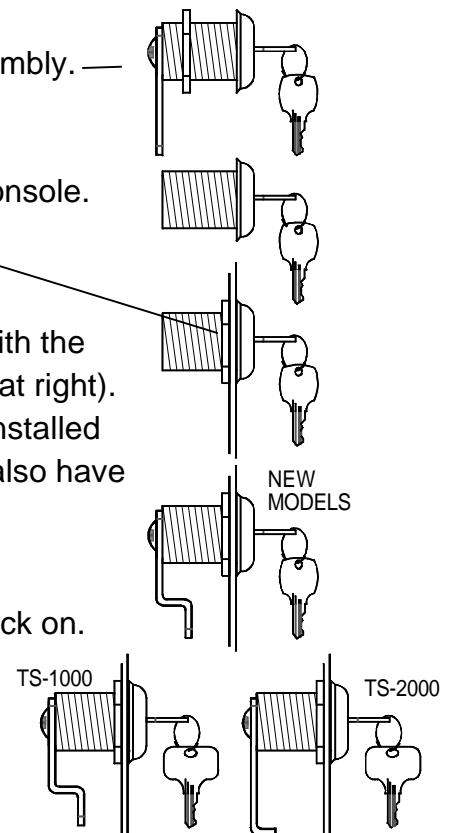

Need Help:

Contact **INCON** Technical Service Department
toll free at 1-800-984-6266.

