


## Changing the TS-LLD Leak Sensing Unit

### Parts Required:

1. TS-LLD Installation Manual (INCON P/N 000-1359)
2. Leak Sensing Unit (LSU) replacement part (LSSP-LSU)
3. INCON Danger Stickers (240-1175)
4. M I Cable Adapter (FE Petro, or RedJacket)

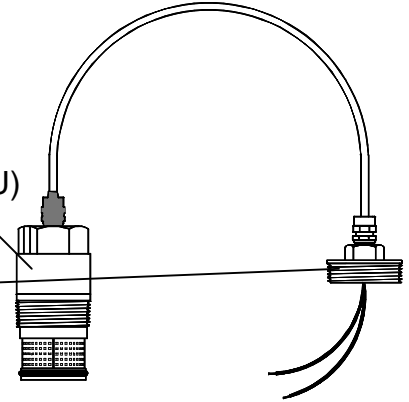

### Tools & Material Required:

1. Manufacturers' documentation for the Submerged Turbine Pump (STP)
2. See the Installation Manual for a detailed list of Materials & Tools Required

### Old TS-LLD LSU – Removal Steps:



1. **DANGER** disconnect electrical power as described in the LSU Installation and Safety chapters of the TS-LLD Installation Manual.
2. Bleed / relieve the pipe line pressure !
3. Follow the LSU Installation steps shown in the TS-LLD Installation Manual – *IN REVERSE ORDER* – to remove the LSU.

### New Leak Sensing Unit – Installation:

Follow the **Safety Instructions**, the steps for **LSU Installation**, and the **After Installation Steps / Testing** (as detailed in the Installation Manual).

### Return the old Leak Sensing Unit:

Pack the old Leak Sensing Unit and contact INCON Technical Service Department for: an RMA number, the exact Return Shipping Address, and about any other instructions that may be required. Call toll free at 1-800-984-6266.

