


Changing the TS-LLD Control Unit Faceplate

Parts Required:

1. TS-LLD Installation Manual (INCON P/N 000-1359)
2. New LSSP-FPU Faceplate replacement part for the TS-LLD Control Unit (CU)

Tools Required:

1. Flat-bladed screwdrivers (assorted sizes)
2. Wire Strippers, cutters, and crimp splice tool
3. Indelible ink pen or black ball point pen

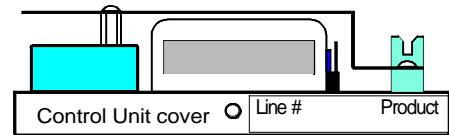

Old TS-LLD Control Unit Faceplate – Removal Steps:



1. **DANGER** disconnect electrical power as described in the CU Installation & Wiring and in the Safety section of the TS-LLD Installation Manual.
2. Remove the 4 hold-down screws and remove the old faceplate.
3. Record the configuration jumper link positions of J2.

New Control Unit – Installation:

1. Follow the **Safety Instructions**, the steps 1 through 3 for **the Control Unit Faceplate Installation**, and the **After Installation Steps / Testing** (as detailed in the TS-LLD Installation Manual).
2. Install the 4 faceplate hold-down screws, and
3. Write the Line # and Product on the new faceplate label.

Return the old Control Unit Faceplate:

Bag / box the old faceplate and contact INCON Technical Service Department for an RMA number, the exact Return Shipping Address and other instructions that may be required. Call toll free at 1-800-984-6266.

