



Changing the TS-LLD Control Unit Enclosure

Parts Required:

1. TS-LLD Installation Manual
(INCON P/N 000-1359)
2. Control Unit enclosure replacement part

Tools Required:

1. Adjustable Wrench
2. Flat-bladed screwdrivers (assorted sizes)
3. Wire strippers & cutters, & crimp splice tool
4. Indelible ink pen or black ball point pen

Old TS-LLD Control Unit (CU) Enclosure – Removal Steps:



1. **DANGER** disconnect electrical power as described in the CU Installation & Wiring section and in the Safety section of the TS-LLD Installation Manual.
2. Remove the 4 hold-down screws and remove and save the faceplate.
3. Remove the 7 wire connections at the pump relay box from the Control Unit.
4. If present, Label and remove any wiring at TB2 and the top conduit fitting.
5. Unscrew the conduit fitting inside of the control unit to remove the old enclosure.

New TS-LLD Fuse F1 – Installation:

Follow the **Safety Instructions**, and the installation steps for the new CU enclosure, reinstall the **CU faceplate**, the fitting and any wiring that was terminated at TB2, and follow the **After Installation Steps / Testing** (as detailed in the Installation Manual).

Return the old Control Unit Enclosure:

Bag / box the old Control Unit enclosure and contact **INCON** Technical Service Department for an RMA number, the exact Return Shipping Address, and for any other instructions that may be need. Call toll free at 1-800-984-6266.

