


Changing the miniature Fuse in the TS-LLD Control Unit

Parts Required:

1. TS-LLD Installation Manual (INCON P/N 000-1359)
2. Control Unit plug-in, miniature fuse (LSSP-FUSE)

Tools Required:

- Flat-bladed screwdrivers (assorted sizes)

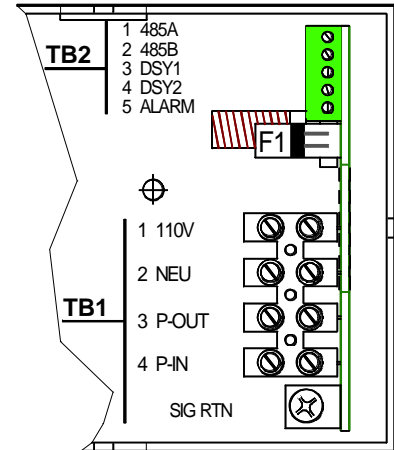

Old TS-LLD Fuse F1 – Removal Steps:



1. **DANGER** disconnect electrical power as described in the TS-LLD CU Installation & Wiring and in the Safety section of that manual.
2. Remove the 4 hold-down screws and remove the existing faceplate.
3. Remove the old fuse (F1) on the small, upright terminal board (see the chapter about TS-LLD CU Installation and Wiring).

New TS-LLD Fuse F1 – Installation:

1. Follow the **Safety Instructions** (as detailed in the TS-LLD Installation Manual).
2. Insert the new fuse into its socket on the upright terminal board,
3. Reinstall the **CU faceplate**, and
4. Follow the **After Installation Steps / Testing**

Need Help:

Contact **INCON** Technical Service Department toll free at 1-800-984-6266 for troubleshooting help if F1 blows again.

