


Model 662 Top Adaptor

Replacement Instructions

Replacing the Top Adaptor

1. Close the valve manually by releasing the fulcrum arm from the fusible link and draining any product from the dispenser.
2. Remove the outlet piping, the damaged top adaptor (three socket head cap screws), and the square seal ring.
3. Assemble a new seal ring into a new adaptor (use white petroleum jelly to hold it in place).
4. Reinstall the top adaptor on to the valve (three socket head cap screws) and hand tighten the three (3) 5/16" socket head cap screws.
5. Remove the Zip Tie and then the metal tool from between the adaptor top and base (Poppetted adapters only).
6. Torque the socket head cap screws to 10-15 ft-lbs.
7. After the valve has been installed, open the valve by engaging the fulcrum arm to the fusible link.
8. Fully test the valve before returning it to service.

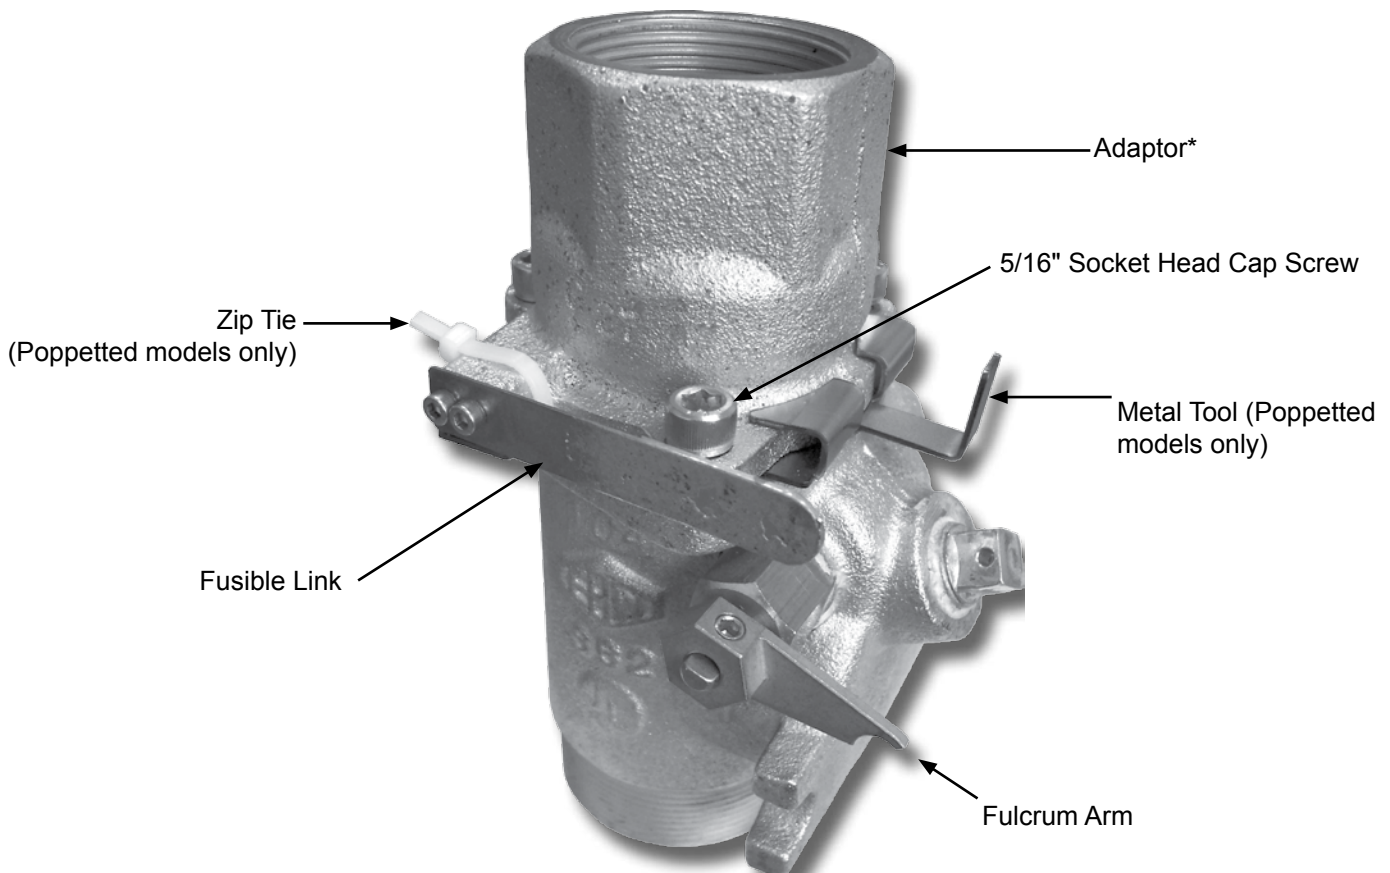

* See second page for other adaptors available

Manual #	Revision	Date	Changes from previous revision
F-1303	2	Jan 2011	Added adaptor removal instructions and added alternate model information

Non-Poppetted Adapters	Poppetted Adapters
 <p data-bbox="407 720 581 751">Union Adapter</p>	 <p data-bbox="984 720 1284 751">Poppetted Union Adapter</p>
 <p data-bbox="354 1161 638 1192">Female-Thread Adapter</p>	 <p data-bbox="930 1161 1341 1192">Poppetted Female-Thread Adapter</p>
 <p data-bbox="367 1619 621 1650">Male-Thread Adapter</p>	 <p data-bbox="943 1619 1325 1650">Poppetted Male-Thread Adapter</p>