

TS-2001, AutoStik II (8Ch) Ribbon Cable (P/N 600-0072 & 600-0071):

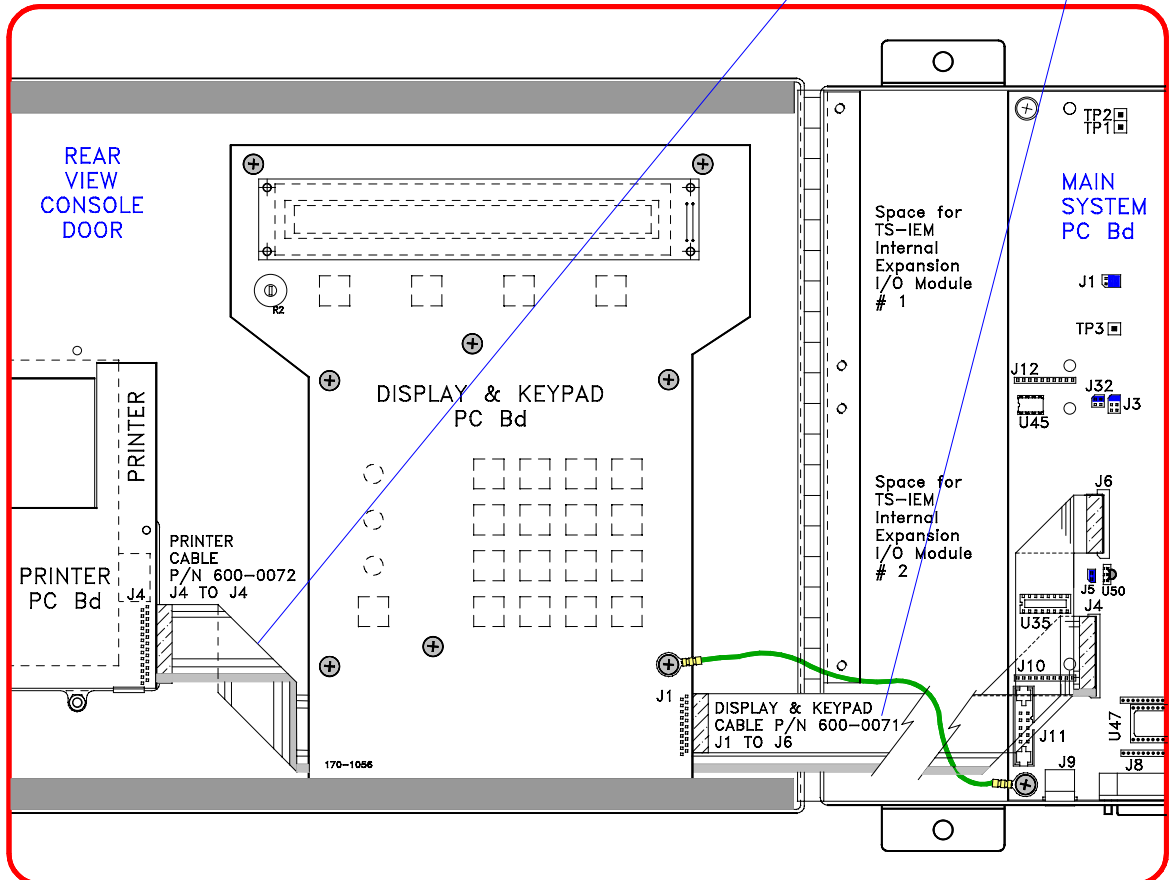


Diagram: 1

Removal (with all Tank Gauge power **OFF**):

- Remove the ribbon cable by pulling it straight out → of its connector (see above).
 NOTE: The 26 conductor printer cable (P/N 600-0072) runs under the display PC Board and under the 20 conductor Display and Keypad cable (P/N 600-0071).

Installation (with all Tank Gauge power **OFF**):

- Install the cables back into the appropriate connector **gloss side up or to the right** (silver conductor side down or to the left). Do this by grasping the flat ribbon cable near the end and pushing it straight into the connector.

