

TS-IDCHIP Installation Instructions for AutoStik,
BulkStik, and Tank Sentinel ATG's

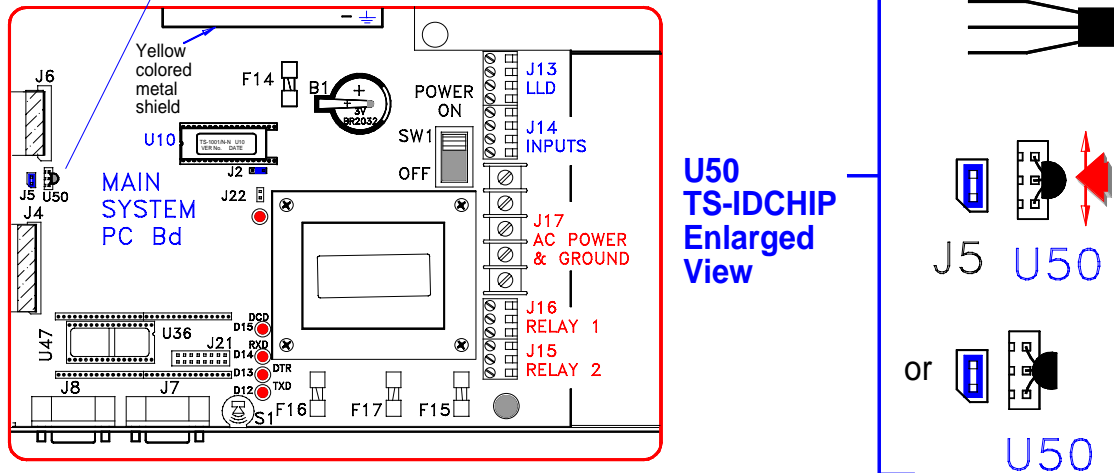


Diagram: A



DANGER Electrical Shock Hazard Turn off all power going to J17, J16 and J15 (see above) and any TS-IEM Internal Expansion Module(s)... optional TS-2001 or Auto/Stik II console accessory. Make sure all safety shields are installed.

NOTE: The TS-IDCHIP is serial-number specific and will only work in one console.

Removal & Installation Steps (with all Tank Gauge power TURNED OFF):

- 1.) **Printout the complete system and tank setup reports for all tanks.**
- 2.) Ground yourself to eliminate any static electricity (touch the metal safety shield above the EPROM) and pull the older TS-IDCHIP (at U50) out of its socket.
- 3.) Ground yourself again and remove the new TS-IDCHIP from its packaging.
- 4.) Spread the three legs out enough to fit into the matching sockets of U50.
- 5.) Grasp the head of the chip and insert the three legs over the matching sockets, and move the chip back and forth in 6 to 12 o'clock positions, while pushing down on the chip (to seat it into its socket). It seats after moving about 1/4 inches.
- 6.) Turn the power back on, and reprogram the Tank Sentinel or Auto/Stik console according to any special upgrade setup instructions or manuals that may be supplied.

