


**Data Modem / Data Fax Modem Installation
 for Tank Sentinel, AutoStik, & BulkStik ATGs**

Parts Supplied with the Upgrade / Replacement Kit:



Communication Cord (14 feet) and the Fax/Modem PC Board (U47 plug-in).

Installation Diagrams (see Installation & Programming Manuals also):

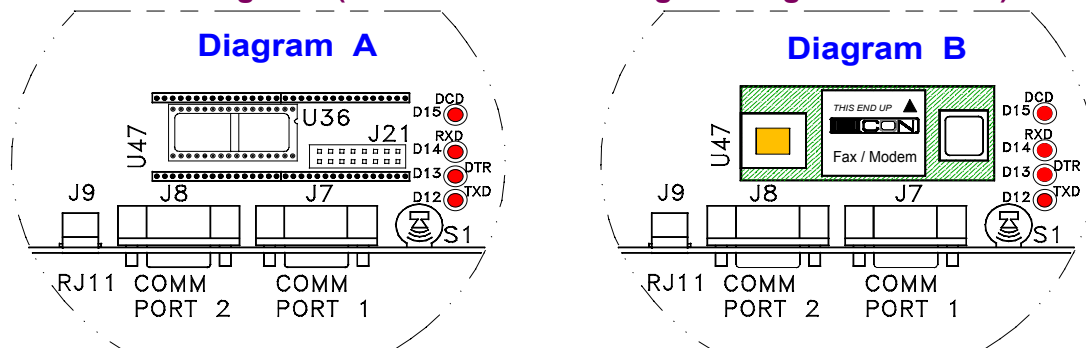

Removal & Installation Steps

- 1.) Turn all Tank Gauge power **OFF** and unplug the phone cord (if present)
- 2.) **Ground yourself** — *touch the gold metal safety shield in the console to remove static electricity, which could damage electronic components*
- 3.) A replacement EPROM must be installed at U10 when the existing EPROM version number is earlier than 1.2 — Follow replacement instructions and notes that are described in EPROM Replacement Instructions
- 4.) If present, pry up and remove the existing Fax/Modem assembly with a wooden dowel or non-metallic tool
- 5.) **Ground yourself again** and remove the new Fax/Modem assembly from the packaging material. **Carefully** align it over the multi-pin sockets of U47 – with the Fax/Modem label facing up (as shown above). Use your thumbs and press the assembly into the sockets at both ends (do not touch any pins while doing this)
- 6.) Turn the Tank Gauge power **ON** and plug the communications cord into the **RJ 11** jack (at the bottom of the console) and the other end into the telephone outlet
- 7.) **Wait 2 minutes** before entering Setup and performing the dial tone test
- 8.) To program the modem for Data and/or FAX transmission, please follow the Comm Ports–FAX/MODEM menu in the Setup Programming Guide

