

INSTALLATION INSTRUCTIONS FOR 1 1/4" STRAINER KIT 495-125


1. PLACE FIRST O-RING (11039-05) OVER TOP
END OF STRAINER ASS'Y.

2. PLACE SECOND O-RING
(11039-05) HERE FROM BOTOM
OF STRAINER ASS'Y.

3. PLACE THRUST RING (495-121-01)
ON BOTTOM OF SECOND O-RING.

4. THIS ASSEMBLY CAN NOW
BE PLACED IN NOZZLE TUBE.

STRAINER ASS'Y
495-207-01

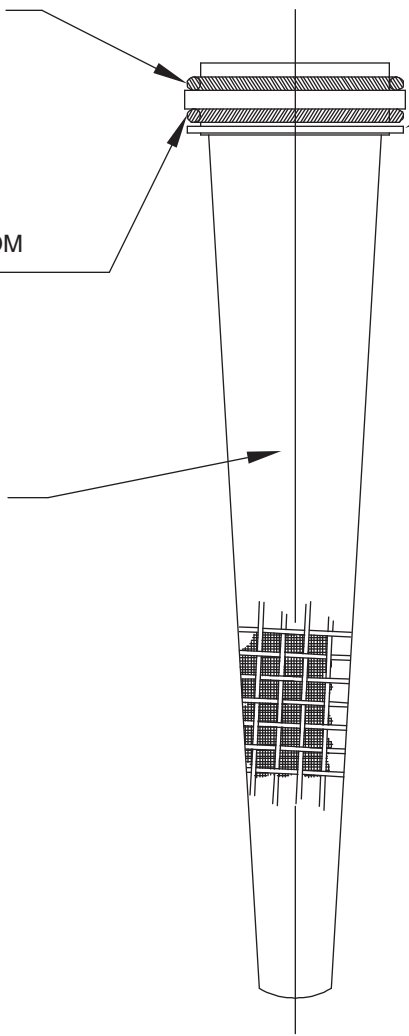

Franklin Fueling Systems

3760 Marsh Road • Madison, WI 53718 U.S.A.

Tel: +1 608 838 8786 • Fax: +1 608 838 6433 • www.franklinfueling.com

Tel: USA & Canada 1 800 225 9787 • Tel: Mexico 001 800 738 7610