

# INSTALLATION INSTRUCTIONS

## Model 908-221

### Optic Socket


## Important: Please Read Before Installing

1. EBW 908-221 Optic Sockets are designed in compliance with WOGA and API RP1004.

2. When mounting Socket Housing using the holes located inside of housing, a sealant should be used around mounting

bolts to prevent moisture from entering.

3. The 6-32" screw located on the outside of the housing should be in the "TOP" hole when mounted to allow drainage of condensation out the bottom of the hole.

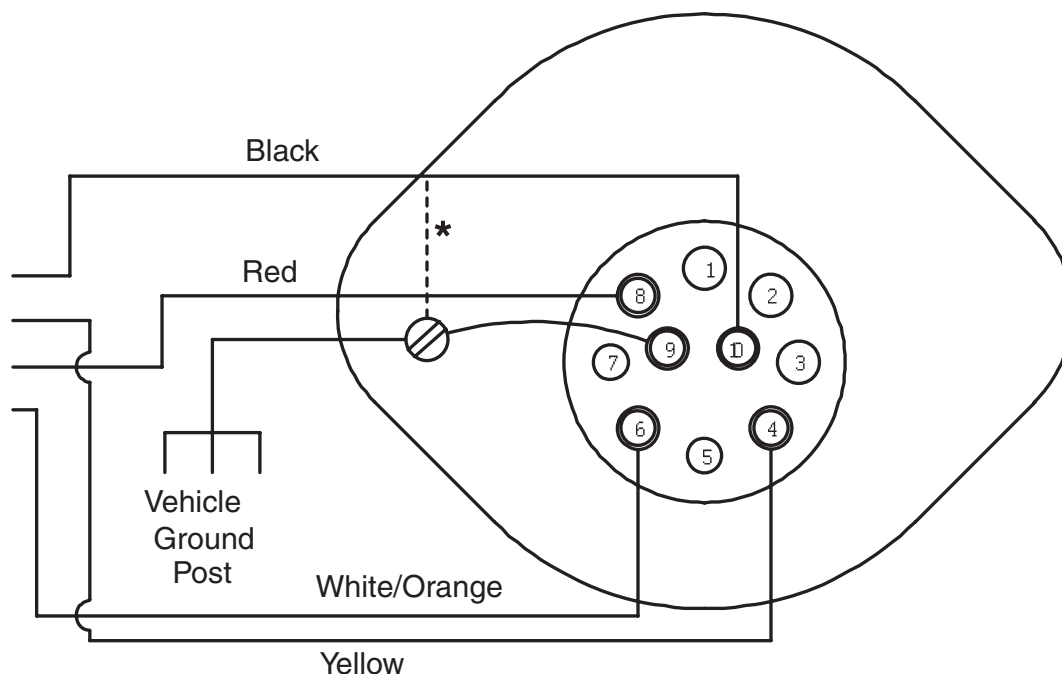

908-221 Optic Socket (Viewed from the rear)

**Note:** If SCULLY GROUNDHOG™ is required, you must separate pins 9 & 10 using 9 for the GROUNDHOG™ and 10 for the chassis system ground, or what is required at your customer's loading facility. If SCULLY GROUNDHOG™ is not required jumper pins 9 & 10 together.

\* Hookup when using Ground Hog™



**Franklin Fueling Systems**

3760 Marsh Road • Madison, WI 53718 U.S.A.

Tel: +1 608 838 8786 • Fax: +1 608 838 6433 • [www.franklinfueling.com](http://www.franklinfueling.com)

Tel: USA & Canada 1 800 225 9787 • Tel: México 001 800 738 7610